

# BUTKON KABİN DOT - BUTKON C.O.P. DOT

REVİZYON KUTUSU KOD ÇIKIŞLARI  
( M0, M1, M2, M3, M4 )  
INSPECTION BOX GRAY CODE OUTPUTS

REVİZYON KUTUSU İKAZ ÇIKIŞLARI  
( 31, 32, 02, 804 )  
INSPECTION BOX DISPLAY ARROW OUTPUTS

GÖSTERGEYİ BINARY MODDA ÇALIŞTIRMAK İÇİN BINARY UCUNA 100 VERİNİZ. GRAY MODDA İSE BOŞ BIRAKINIZ.  
TO OPERATE THE INDICATOR IN BINARY MODE, GIVE 100 TO THE BINARY END. IF IN GRAY MODE, LEAVE IT BLANK.

PROGRAMLANABİLİR BUTONLAR (sayfa2) - PROGRAMMABLE BUTTONS (page 2)



CODE 1000 ÇIKIŞI VEREN PANO :  
PANEL THAT GIVES 1000 OUTPUT:

CODE 100 ÇIKIŞI VEREN PANO :  
PANEL THAT GIVES 100 OUTPUT:

100 / +24V

1000 / GND

ANLAŞILMASI  
İÇİN ÖRNEK :  
EXAMPLE FOR  
UNDERSTANDING

SIGNAL 1000 ÇIKIŞI VEREN PANO :  
PANEL THAT GIVES 1000 OUTPUT:

SIGNAL 100 ÇIKIŞI VEREN PANO :  
PANEL THAT GIVES 100 OUTPUT:

100 / +24V

1000 / GND

YUKARI OK, AŞAĞI OK VE SERVİS DİŞİ İKAZ'A BAĞLIDIR. 31 UP, 32 DOWN, 804 OVER LOAD, 02 OUT OF SERVICE CONNECTED TO SIGNAL.

M0, M1, M2, M3, M4 KOD'A BAĞLIDIR. M0, M1, M2, M3, M4 CONNECTED TO CODE.

TOPLAM 4 DURAĞA KADAR M0 VE M1 BAĞLAMANIZ YETERLİDİR. M2, M3 VE M4 BAĞLAMANIZA GEREK YOKTUR  
max.4 Durak UP TO 4 STOPS, IT IS ENOUGH TO CONNECT TO M0, M1. NO NEED TO CONNECT M2, M3 AND M4

TOPLAM 8 DURAĞA KADAR M0, M1 VE M2 BAĞLAMANIZ YETERLİDİR. M3 VE M4 BAĞLAMANIZA GEREK YOKTUR  
max.8 Durak UP TO 8 STOPS, IT IS ENOUGH TO CONNECT TO M0, M1, M2. NO NEED TO CONNECT M3 AND M4

TOPLAM 16 DURAĞA KADAR M0, M1, M2 VE M3 BAĞLAMANIZ YETERLİDİR. M4 BAĞLAMANIZA GEREK YOKTUR  
max.16 Durak UP TO 16 STOPS, IT IS ENOUGH TO CONNECT TO M0, M1, M2, M3. NO NEED TO CONNECT M4

max.32 Durak TOPLAM 16 DURAK ÜSTÜ İSE M0, M1, M2, M3 VE M4 BAĞLANMALIDIR.  
IF ABOVE 16 STOPS, M0, M1, M2, M3 AND M4 MUST BE CONNECTED.

# ( EXAMPLE: ASSIGNING B2 TO THE FIRST STOP )



BUTKON®



> İLK EKCRAN ( FIRST DISPLAY )

> ENT BUTONUNA BASILI TUTUNUZ  
( HOLD ENT BUTTON )



> F = KAT ( FLOOR )

> ATANACAK DURAK ( ASSIGNED STOP )

> ENT BUTONUNA BASINIZ  
( PRESS ENT BUTTON )



> UP BUTONU İLE B KARAKTERİNİ BULUNUZ  
( FIND B CHARACTER WITH THE UP BUTTON )

> ENT BUTONUNA BASINIZ  
( PRESS ENT BUTTON )



> UP BUTONU İLE 2 KARAKTERİNİ BULUNUZ  
( FIND 2 CHARACTER WITH THE UP BUTTON )

> ENT BUTONUNA BASINIZ  
( PRESS ENT BUTTON )



> UP BUTONU İLE FARKLI KATLARA  
YİNE AYNI ADIMLAR İLE KAT ATANABİLİR

( WITH THE UP BUTTON, IT IS POSSIBLE TO ASSIGN TO DIFFERENT FLOORS BY FOLLOWING THE SAME STEPS AS BEFORE. )

> ENT BUTONUNA BASILI TUTUNUZ  
( HOLD ENT BUTTON )



> SON EKCRAN ( LAST DISPLAY )